

VAV system solution for non-pressure dependent applications in enclosed spaces

Table of contents Technical data sheet Brief description 3 Technical data Safety notes 5 Dimensions Operation, setup, connections 6 **Electrical connections** 7 **Functions** Nominal volumetric flow Vnom Operating volumetric flow Vmin...Vmax 8 VAV application 8 VAV voltage level VAV operation 8 CAV application Control Priorities input w/Z1/Z2 9 Vmin/Vmax setting [Potentiometer or Tool (PP Command)] 9 Setting with VAV adjustment tool ZTH-VAV 10 Actuator variants/VAV adjustment tool ZTH-VAV 11



Tool connector ready of VAV-Universal system solution with integrated almost static Belimo D3 pressure sensor for non-pressure dependent VAV and CAV applications in enclosed spaces.

Control:

DC 2...10V/0...10V/contacts

Settings:

- at the controller Vmin/Vmax or
- with VAV adjustment tool ZTH-VAV



Brief description

Application

The digital VAV-Universal solution VRD3 with its PI control characteristics is used for pressure independent control of VAV units in the comfort zone.

Pressure measurement

The integrated maintenance-free Belimo D3 differential pressure sensor allows a variety of applications ranging from offices, hospitals and hotels all the way to cruise ships.

Actuator

The following actuator models are available depending on the area of application, size and structural shape of the VAV unit:

- Rotary actuator 0...95° ≤, depending on the size 5, 10, 20Nm
- Rotary actuator 0...1800°

 e.g. for iris dampers 3Nm
 Linear actuator 100, 200 or 300mm linear motion 150N

Control function

VAV or CAV operation

Bus mode

The utilisation of the VRD3 in MP-Bus systems (UK24LON, Fan Optimiser COU24-A-MP, etc.) is not possible. The VAV-Compact series and the VAV-Universal VRP-M system solution is available for these bus applications.

VAV - variable air volume

For variable air volume applications based on a modulating reference variable, e.g. supplied by a room temperature controller or a DDC system; it facilitates demand-related, power-saving ventilation in individual rooms or in zones of air conditioning systems. The $\dot{V}_{min...}\dot{V}_{max}$ working range can be subdivided by selecting a mode. Available are the following: DC 2...10/0...10V.

CAV - constant volume flow

For constant air volume applications, e.g. in step mode, controlled by means of an occupancy switch. The following operating modes are available: CLOSED/Vmin/Vmax/OPEN

Function indication

Functional readiness display with green LED.

Operating and service devices

- VAV adjustment and diagnostics device ZTH-VAV: pluggable at the service socket of the VRD3 or at the PP interface (terminal 4).
- · Belimo PC-Tool cannot be used with the VRD3

Assembly and connection

The connection is made by screw terminal. The actuator is connected with a plug-ready, preassembled cable.

OEM factory settings

The VRD3 system solution is mounted on the VAV unit by the unit manufacturer, who adjusts and tests it according to the application. The VRD3 solution is sold exclusively through the OEM channel for this reason.



Technical data		
Supply		
Nominal voltage	AC 24V, 50/60Hz/DC 24V	
Nominal voltage range	AC 19.2 28.8V/DC 21.628.8V	
Power consumption	2W/3.5VA, without actuator	
Differential pressure sensor, installed		
Type, principle of operation	Belimo D3-Sensor, Dynamic with almost static behaviour	
Operating range	2300Pa	
Overload capability	±3000Pa	
Installation position	Non-position-dependent, no zero-point compensation necessary	
Materials in contact with medium	Glass, epoxy resin, PA, TPE	
Control function	VAV and CAV units	
Application	Single duct installations/Supply/exhaust air unitsDual duct installations/Mixed units	
Pressure range	2300Pa	
Max. system primary pressure	Information for VAV unit manufacturer: ≤1000Pa ΔP@Vnom: useful adjusting range 50300Pa >10001500Pa ΔP@Vnom: useful adjusting range 150300Pa	
Characterising	VAV units, OEM-independent, with linearization to match the differential pressure ser	
Medium	Supply and exhaust air in the comfort zone and in applications with sensor-compatit	ole media
Measuring air conditions	0+50°C/590% r.H., non-condensating	
Operating volumetric flow		
Vnom	OEM-specific nominal volumetric flow setting, suitable for the VAV unit	
Vmax Vmin	30100% of Vnom 0100% of Vnom	
VAV-input w, terminal 3	Switch-selectable VRD3 ↔ VRD2 (compatible with predecessor model see page 6)	
Mode DC 210V	VminVmax, CLOSED with activation <0.1V	(see page 57)
Mode DC 010V	VminVmax	, 13 ,
Input impedance	~100kΩ	
CAV-input w, terminal 3	 Compatible with L/N/SMV-D2M-MP Operating stages CLOSED, Vmin, Vmax, OPEN 	(see page 57)
Override-input Z1/Z2	Requires AC 24V power supply	
Z1 – terminal 6	OPEN	
Z2 – terminal 7	CLOSED, Vmin, Vmax	
Actual volumetric flow signal [U5] – terminal 5	– DC 210/010V for 0100% Vnom – Max. load 0.5mA	
Operating		
Local	Potentiometer for Vmin/Vmax setting	
Tool	VAV adjustment tool ZTH-VAV, connection via service plug or PP connection	
Actuator (V models)		
5/10/20Nm, depending on application Connection can be plugged into VRD3	 Direction of rotation (I / r or ↑/↓) Angle of rotation limitation or stroke limitation Adaption, adjusting range modification and/or resolution to control range Manual disengagement 	(see page 10)
Sound power level	 Max. 35 dB(A), SM24A-V max. 45 dB(A) LF24-A-V Motor max. 35dB(A), spring ≈ 62dB(A); AF24-V Motor max. 35dB(A), spr 	ing ≈ 62dB(A)
Damper rotation	Clamp, for axle round/square or positive fit e.g. 8x8mm	
Connection		
Supply and control	7-pin screw terminals for 2x1.5mm ²	
Tool connection	RJ12 socket	
Actuator	3-pin plug forV actuator	
Safety		
Protection class	III Safety extra-low voltage	
Degree of protection	IP40	
EMC	CE according to 2004/108/EC	
Mode of operation	Type 1 (EN 60730-1)	
Rated impulse voltage	0.8kV (EN 60730-1)	



(continued)
2 (EN 60730-1)
050°C
-20+80°C
95% r.H., non-condensating (EN 60730-1)
Maintenance-free
See «Dimensions» on page 3
Approx. 440g


Safety note




- The VRD3 system solution is not allowed to be used outside the specified field of application, especially in aircraft or any other form of air transport.
- Assembly must be carried out by trained personnel. Any legal regulations or regulations issued by authorities must be observed during assembly.
- The device does not contain any parts which can be replaced or repaired by the user.
- The cable must not be removed from the actuator.
- The device contains electrical and electronic components and is not allowed to be disposed
 of the household refuse. All locally valid regulations and requirements must be observed.

Dimensions [mm]

Dimensional drawings (For actuators see separate data sheets)

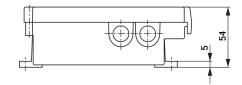

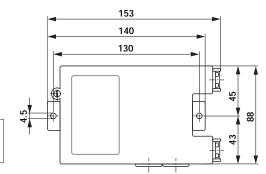


$Compatibility\ VRD3 \leftrightarrow VRD2$

The VRD3 corresponds in its dimensions and connections to the VRD2. $\label{eq:connections}$



Operation, setup, connections

Setup, connections

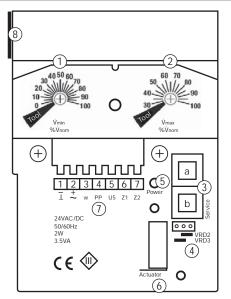

1	Operating volumetric flow setting Vmin 0100% [in % of Vnom]
2	Operating volumetric flow setting Vmax 30100% [in % of Vnom]
3	Tool connection a) System plug: internal Belimo function, not for users b) Service: connection for VAV adjustment tool ZTH-VAV
4	Jumper for input w (terminal 3) Function: - VRD2: VRD2-compatible - VRD3: VRD3 and L/N/SMV-D2-MP
(5)	Power LED, Function display 24V
6	Connection for V-actuator

Connecting terminals 1...7

Connection D3 Sensor

Connecting terminals 1...7

Terminal	Designation	Function	
1	1/-	0 1 40/00 0 11/	
2	~/+	Supply AC/DC 24V	
3	w	Reference value input w jumper VRD3 - Mode 010/210V switchable with ZTH-VAV - Function as with new VAV-Compact L/N/SMV-D2-MP VAV: 010/210V=VminVmax CAV: CLOSED/Vmin/Vmax/OPEN	
		Reference value input w jumper VRD2 - Mode 010/210V switchable with ZTH-VAV - Function as with VRD2 VAV: 010/210V=VminVmax CAV: not possible use Z1/Z2	
4	PP	PP interface for ZTH-VAV (no MP operation)	
5	U5	Actual volumetric flow signal U5 - Mode 010/210V switchable with ZTH-VAV - Display range 0100% Vnom	
6	Z1	Override input Z1: Function OPEN	
7	Z2	Forced control input Z2: Function CLOSED/V _{min} /V _{max}	

Note



 It is recommended that the PP connection (terminal 4) and the 24V be wired to readily accessible terminals in order to guarantee easy access with the VAV adjustment tool ZTH-VAV (e.g. at the room temperature controller CR24 or in the control cabinet).

The VRD3 does not support any MP operation!



ZTH-VAV


ZTH-VAV


Electrical connections

Wiring diagrams

Connection VRD3

VAV connection: supply and exhaust air system

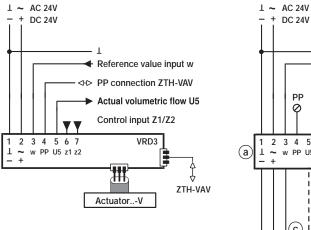

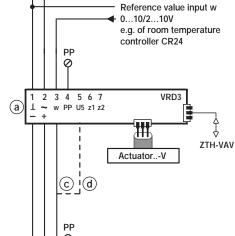

a e.g. supply air unit
 b e.g. exhaust air unit
 Parallel connection
 Master-Slave

CLOSED V_{min}*)

(4)

VRD3

ZTH-VAV

##

Actuator..-V

Compatibility VRD3 ↔ VRD2:

- Reference signal [w] (terminal 3)
 Plugging the jumper in at position «VRD2»
 causes the VRD3 to behave like the predecessor model VRD2 (i.e. no CAV control function via input w).
- Forced control inputs Z1 (terminal 6) and Z2 (terminal 7) are functionally compatible with the VRD2 and are not influenced by the jumper.
- Tool connection PP (terminal 4)
 The VRD3 is equipped with a separate tool connection PP (terminal 4).

 For the VRD2, the tool connection is made via terminal 5, which exhibits a combination function: volumetric flow actual value signal U5 and PP

CAV connection




(1)

2 3 4 5 6 7

w PP U5 z1 z2

OPEN

Connection input w

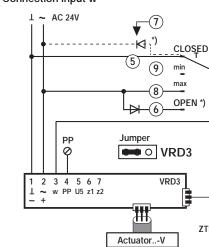



connection

The input signals 3 (w), 6 (Z1) and 7 (Z2) of several VRD3s can be switched with a joint signal, e.g. CLOSED.

It is not permitted to switch connection 6 (Z1) with a VRD2 terminal 6.

Overview control signals/Functions

Signal terminal/Function	Priority	GND	Pos. hydraulic switch	Neg. hydraulic switch	24VAC	Open
Forced input Z1 (terminal 6)	1	_	OPEN 1	_	OPEN 1	-
Forced input Z2 (terminal 7)	2	CLOSED 2	V _{min} €3	_	\dot{V}_{max}	_
Tool (PP-Cmd)→ZTH-VAV	3	CAV stages (A	Auto, CLOSI	ED, OPEN, '	Vmin, Vmax, S	Stop)
Reference signal w-terminal 3 Jumper: VRD3	4	CLOSED 5 Mode: 210V	OPEN 6	CLOSED Mode: 010V	Vmax 8	Ÿmin 9

Note

*) CAV control applications require AC 24V power supply.



Functions

Nominal volumetric flow Vnom

 \dot{V}_{nom} corresponds to the maximum volumetric flow of the VAV unit at which the pressure drops and the noise is still within the permissible operating conditions. The \dot{V}_{nom} values are defined by the unit manufacturer for all unit nominal values; the VRD3 controller is calibrated by the OEM to this flow rate.

The volumetric flow actual value signal U5 is always in relation to the \dot{V}_{nom} . Modifications of the operation volumetric flow settings \dot{V}_{min} and \dot{V}_{max} and have therefore no influence on the U5 volt signal.

Operating volumetric flow $\dot{V}_{min...}\dot{V}_{max}$

In variable operation, the volumetic flow is specified by means of the reference signal in the range $\dot{V}_{min...}\dot{V}_{max.}$

- V_{max} forms the upper limit value. Adjustment range 30...100% of V_{nom}.
- Vmax forms the lower limit value. Adjustment range 0...100% of Vnom.


The V_{max} value must always be set higher than the V_{min} value; otherwise the VRD3 controller will operate with the V_{min} volume as setpoint in CAV mode.

See also $^{1)}$ Note below. For $\dot{V}_{min}/\dot{V}_{max}$ settings see page 8.


VAV application

In VAV operation, the regulated amount of air $\dot{V}_{min...}\dot{V}_{max}$ is specified via an analogue reference signal, e.g. from 2...10V room temperature controller.

Example: Mode 0...10V

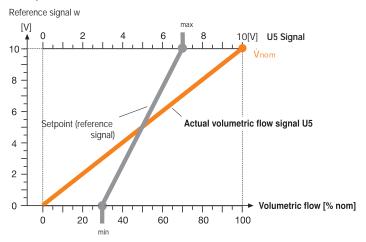

VAV voltage level

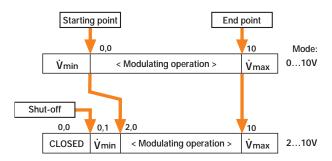

VAV operation

· With «Damper CLOSED» option

In mode 2...10V, it is possible to achieve shut-off mode (damper CLOSED) by lowering the reference signal to 0.0V.

· With superordinate override controls

For forced control input during VAV operation, e.g. CLOSED or OPEN, the reference signal w (input 3) can be overridden by switching the control inputs 6 (Z1) and 7 (Z2).

1) Note concerning the difference of \dot{V}_{min} setting of VRD3 and VRD2

The adjustment range of the operating mode \dot{V}_{min} with:

- VRD2 refers to 0...100% of Vmax
- VRD3 refers to 0...100% of Vnom

The \dot{V}_{min} setting of the VRD3 thus behaves in compatible fashion with the new VAV generation (starting with 2006), i.e. VAV-Compact L/N/SMV-D2-MP, VRP-M.



Functions

(continued)


CAV application

Four constant volumetric flow (CAV) stages are available for step mode:

- Shut-off operation damper CLOSED: the damper is moved to CLOSED.
- CAV stages Vmin/Vmax: the VRD3 controls the selected volumetric flow at a fixed value.
- Flushing operation damper OPEN: The damper can be opened for maximum ventilation, in which case air volume control is deactivated.

The operating mode control signals are connected to inputs 6 (Z1) and 7 (Z2). If signals appear simultaneously at these two inputs, input 6 (Z1) for the OPEN function takes priority.



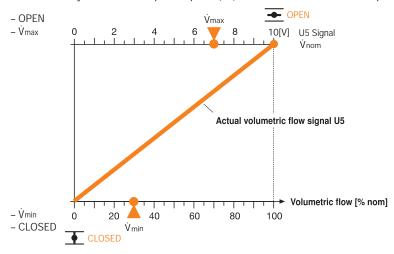

Priorities input w/Z1/Z2

Prio 1:	Z1 (terminal 6)	
Prio 2:	Z2 (terminal 7)	
Prio 3:	VAV adjustment tool ZTH-VAV (PP command)	
Prio 4:	Reference signal w (terminal 3)	

Vmin/Vmax setting [Potentiometer or Tool (PP Command)]

Die operating volumetric flow settings \dot{V}_{min} and \dot{V}_{max} can be adjusted in two different ways on the VRD3:

a) directly on the adjustment potentiometer (analogous to the VRD2)


 \dot{V} min 0...100% of \dot{V} nom

Vmax 30...100% of Vnom

b) with VAV adjustment tool ZTH-VAV (PP command)

Both of the potentiometers \dot{V}_{min} and \dot{V}_{max} must be set to tool position in order to write a value – with PP Command – in the VRD3. If the potentiometer(s) with connected ZTH-VAV are set to «Tool», then the menu will need to be refreshed by actuating the keys $\uparrow\downarrow$. For function see following illustration:

Adjustment potentiometer Vmin/Vmax

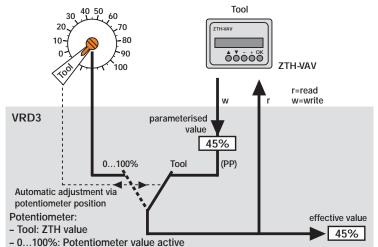

The \dot{V}_{max} value must always be set higher than the \dot{V}_{min} value; otherwise the VRD3 controller will operate with the \dot{V}_{min} volume as setpoint in CAV mode.

Note concerning the difference of \dot{V}_{min} setting of VRD3 and VRD2

The adjustment range of the operating mode \dot{V}_{min} with:

- VRD2 refers to 0...100% of Vmax
- VRD3 refers to 0...100% of Vnom

The \dot{V}_{min} setting of the VRD3 thus behaves in compatible fashion with the new VAV generation (starting with 2006), i.e. VAV-Compact L/N/SMV-D2-MP, VRP-M.



Setting with VAV adjustment tool ZTH-VAV

The entire BELIMO product range with PP connection can be set and controlled with the VAV adjustment tool ZTH-VAV. The connection to the VRD3 is provided by the RJ «Service» socket or at the PP connection (terminal 4), e.g. in the control cabinet.

Operating menu VRD3

\wedge	Option	Unit	Range/setting	Function
/ \	Volumetric flow - actual value	%	0100% [of Vnom]	Commissioning,
1/1	Volumetric flow - setpoint	%	0100% [VminVmax]	service function
$\perp I \perp 1$	Current effective pressure*	Pa	0300Pa	
	Specify CAV steps	_	Auto-CLOSED-OPEN- -Vmin-Vmax-Stop	
	Mode	-	010V, 210V	
	Vmin. setting	%	0100% [of Vnom]	Settings,
$ \setminus $	Vmax. setting	%	30100% [of Vnom]	modifications
$ \setminus $	Vnom VAV unit	%	Nominal setting=100%	
V	Δp@Vnom*	Pa	differential pressure pending with \dot{V}_{nom}	OEM setting

^{*}Option requires ZTH-VAV firmware V1.02 or higher (06.2008). See also 'Release Note ZTH-VAV' at www.belimo.eu.

Specify CAV steps


The VRD3 – with the ZTH-VAV – can be switched to one of the CAV stages illustrated below for functional checking of the VAV/CAV units.

Stage	Function	Control function:
AUTO *	Setpoint of input w, terminal 3 or 6/7.	VAV or CAV operation
CLOSED	Damper closes	no control mode
OPEN	Damper opens no control mode	
V _{min}	Controller travels volumetric flow Vmin CAV operation Vmin	
Vmax	Controller travels volumetric flow Vmax CAV operation Vmax	
STOP	Damper stops at current position no control mode	

^{*}If the ZTH-VAV has been disconnected from the VRD3 without reactivation of the «Auto» stage, then the VRD3 will be reset to automatic operation after max. 120s.

Connection

Connection to	Cable type and order designation	
VRD3, RJ «Service» socket	ZK6-GEN	Accessories
PP connection (terminal 4), e.g. control cabinet terminals	ZK2-GEN	Accessories white 1

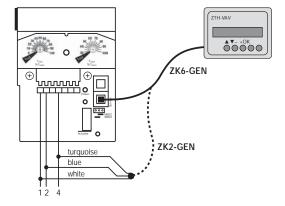

For detailed documentation concerning the handling and function of the ZTH-VAV see 'ZTH-VAV instruction manual' at www.belimo.eu



Actuator variants (standard actuators)

D. L.	Α.Ι	_	000 >
Rotary	Actuators	υ.	90 🖘

Actuators* for special applications

Туре	Actuator	Features
LM24A-V		 Damper Actuator for VAV-Universal AC/DC 24V, modulating, 5Nm Control DC 6.0 ±4V from VRD3 controller Motor running time 110150s Connection: cable with plug Angle of rotation 90° <
NM24A-V		 Damper Actuator for VAV-Universal AC/DC 24V, modulating, 10Nm Control DC 6.0 ±4V from VRD3 controller Motor running time 120s Connection: cable with plug Angle of rotation 90°
SM24A-V		 Damper Actuator for VAV-Universal AC/DC 24V, modulating, 20Nm Control DC 6.0 ±4V from VRD3 controller Motor running time 120s Connection: cable with plug Angle of rotation 90° <
LF24-V		 Spring-Return Actuator for VAV-Universal AC/DC 24V, modulating, 4Nm Control DC 6.0 ±4V from VRD3 controller Running time motor 120300s Running time spring-return approximately 20s Connection: cable with plug Angle of rotation 95°
AF24-V		 Spring-Return Actuator for VAV-Universal AC/DC 24V, modulating, 15Nm Control DC 6.0 ±4V from VRD3 controller Running time motor 120300s Running time spring-return approximately 16s Connection: cable with plug Angle of rotation 95° <
*LU24A		- Rotary Actuator 01800° rotating, e.g. for iris dampers 3Nm
*LH24A		- Linear Actuator 100, 200 or 300mm

*on request

VAV adjustment tool ZTH-VAV

ZTH-VAV BELIMO	 Adjustment tool for Belimo VAV controller Supply to VAV controller AC/DC 24V
----------------	---

For more detailed documents see www.belimo.eu

Innovation, Quality and Consultancy: A partnership for motorising HVAC actuators



Belimo regional head offices

EU BELIMO Automation AG Brunnenbachstrasse 1 8340 Hinwil, Switzerland Tel. + 41 43 843 61 11 Fax: + 41 43 843 62 68 E-Mail: info@belimo.ch BELIMO Actuators (Shanghai) Trading Ltd.
No.479 Chun Dong Road, Building C-2,
Xin Zhuang Industry Park
Shanghai 201108, P.R.China
Tel: + 86 21 5483 2929
Fax: + 86 21 5483 2930

US BELIMO Aircontrols (USA), Inc. 43 Old Ridgebury Road Danbury, CT 06813-2928, USA Tel. + 800 543-9036 / 203 791-9915 Fax: + 800 228-8283 / 203 791-9919

